


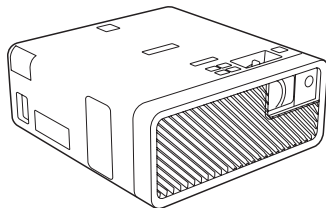

Multimedia Projector

EB-W70

EB-W75



Quick Start Guide

Kurzanleitung

Guide de démarrage rapide

Guida di avvio rapido

Guía de inicio rápido

Guia de Referência Rápida

Introductiehandleiding

Introduktion

Pika-aloitusopas

Hurtigveiledning

Snabbstartsguide

Úvodní příručka

Bevezetés

Przewodnik szybkiego startu

Stručná příručka

Ghid de pornire rapidă

Οδηγός γρήγορης εκκίνησης

Hızlı Başlangıç Kılavuzu

Priročnik za hitri zagon

Kratke upute

Руководство по быстрой установке

Коротка інструкція "Початок роботи"

Қысқаша іске қосу нұсқаулығы

빠른 시작 가이드

دليل البداية السريعة

מדריך להפעלה מהירה

設定手冊

設定説明書

For more information

epson.sn






or

Document CD-ROM




1


Video equipment

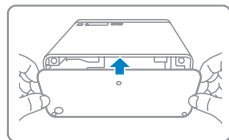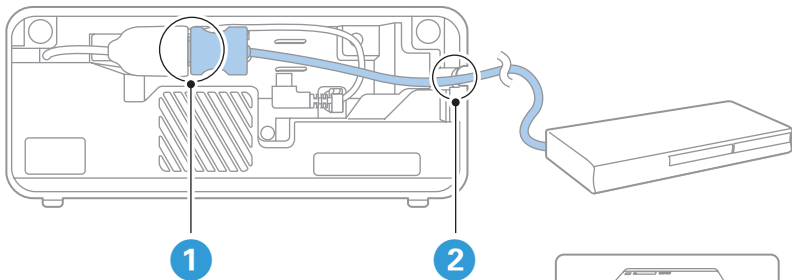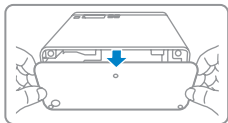

Streaming media player

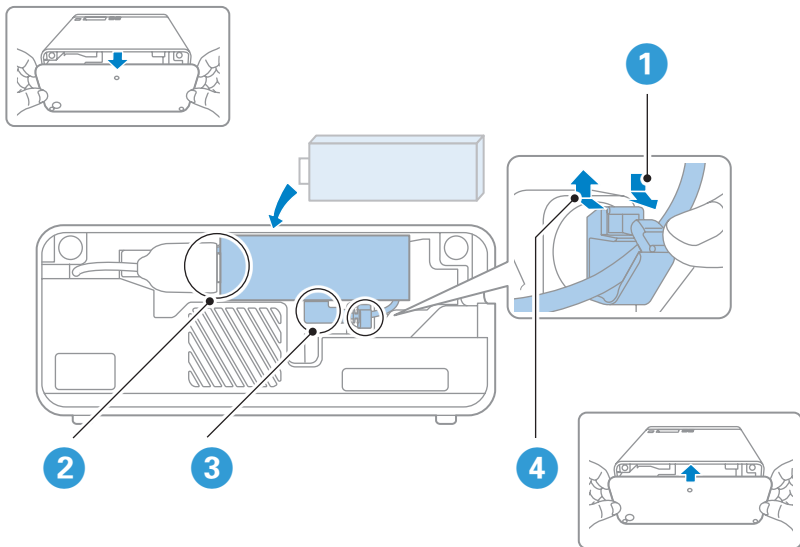

2

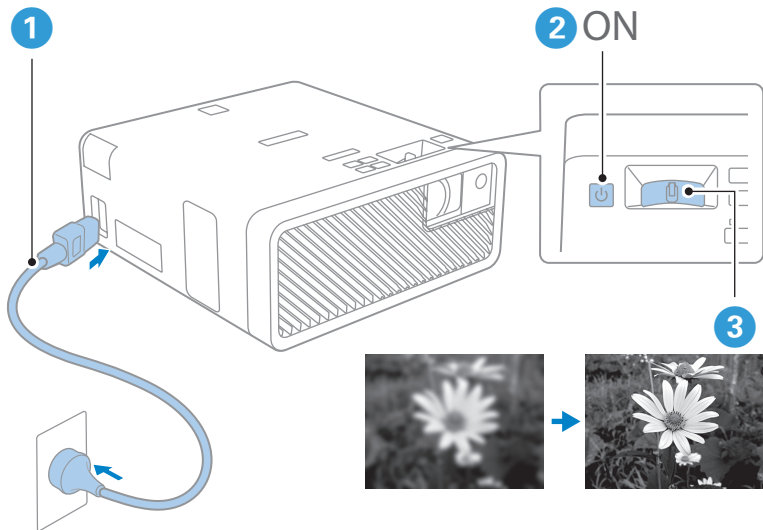

3

