 
 


## Multimedia Projector

 
 
 
 
 
EB-992F	EB-W51
EB-982W	EB-X51
EB-972	EB-E10
EB-118	EB-FH06
EB-W49	EB-W06
EB-X49	EB-X06
EB-E20	EB-E01
EB-FH52	EB-X500
EB-W52	EB-E500

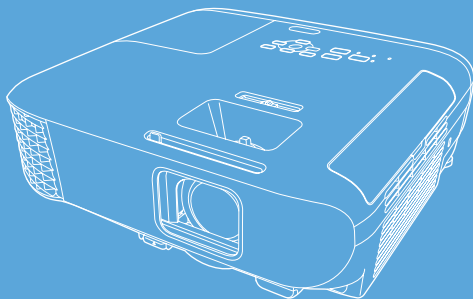

EN	Quick Start Guide	LV	Ātrās darba uzsākšanas pamācība
DE	Kurzanleitung	EL	Οδηγός γρήγορης εκκίνησης
FR	Guide de démarrage rapide	TR	Hızlı Başlangıç Kılavuzu
IT	Guida di avvio rapido	SL	Priročnik za hitri zagon
ES	Guía de inicio rápido	HR	Kratke upute
PT	Guia de Referência Rápida	MK	Прирачник брз почеток
NL	Introductiehandleiding	SR	Uputstvo za brz početak
DA	Introduktion	CA	Guia d'inici ràpid
FI	Pika-aloitusopas	RU	Руководство по быстрой установке
NO	Hurtigveiledning	UK	Коротка інструкція "Початок роботи"
SV	Snabbstartsguide	KK	Қысқа іске қосу нұсқаулығы
CS	Úvodní příručka	KO	빠른 시작 가이드
HU	Bevezetés	ID	Panduan Ringkas
PL	Przewodnik szybkiego startu	AR	دليل البداية السريعة
SK	Stručná príručka	FA	راهنمای سریع برای شروع بکار
BG	Ръководство за бърз старт	ZHS	设定手册
RO	Ghid de pornire rapidă	ZHT	設定説明書
ET	Lühijuhend		
LT	Trumpas pradžios vadovas		

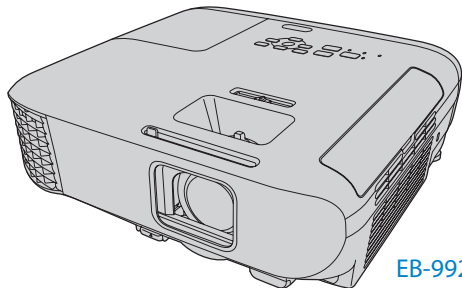

EB-992F

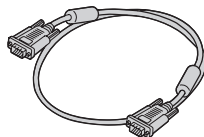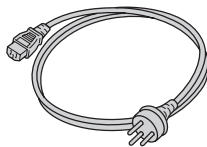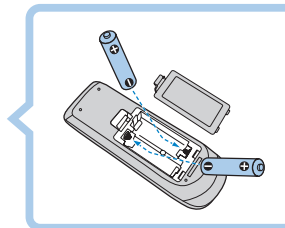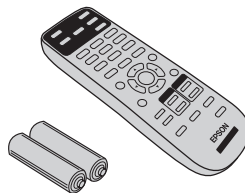






EB-992F/EB-982W/EB-972/  
EB-118/EB-W49/EB-X49/  
EB-E20/EB-FH52/EB-W52/  
EB-W51/EB-X51/EB-FH06/  
EB-W06/EB-X06/EB-X500  
only

EB-982W/EB-972/EB-118/  
EB-W49/EB-X49/EB-W51/  
EB-X51/EB-FH06/EB-W06/  
EB-X06/EB-X500  
only









EPSON		Epson	
Multimedia Proiettore			
EB-992F	EB-972	EB-972	EB-972
EB-982W	EB-982W	EB-982W	EB-982W
EB-118	EB-118	EB-118	EB-118
EB-W49	EB-W49	EB-W49	EB-W49
EB-X49	EB-X49	EB-X49	EB-X49
EB-E20	EB-E20	EB-E20	EB-E20
EB-FH52	EB-FH52	EB-FH52	EB-FH52
EB-W52	EB-W52	EB-W52	EB-W52
EB-X51	EB-X51	EB-X51	EB-X51
EB-FH06	EB-FH06	EB-FH06	EB-FH06
EB-W06	EB-W06	EB-W06	EB-W06
EB-X06	EB-X06	EB-X06	EB-X06
EB-X500	EB-X500	EB-X500	EB-X500
EB-992F	EB-972	EB-972	EB-972
EB-982W	EB-982W	EB-982W	EB-982W
EB-118	EB-118	EB-118	EB-118
EB-W49	EB-W49	EB-W49	EB-W49
EB-X49	EB-X49	EB-X49	EB-X49
EB-E20	EB-E20	EB-E20	EB-E20
EB-FH52	EB-FH52	EB-FH52	EB-FH52
EB-W52	EB-W52	EB-W52	EB-W52
EB-X51	EB-X51	EB-X51	EB-X51
EB-FH06	EB-FH06	EB-FH06	EB-FH06
EB-W06	EB-W06	EB-W06	EB-W06
EB-X06	EB-X06	EB-X06	EB-X06
EB-X500	EB-X500	EB-X500	EB-X500

     The following items are not included with all projector models.

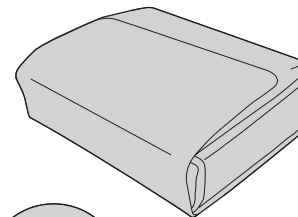


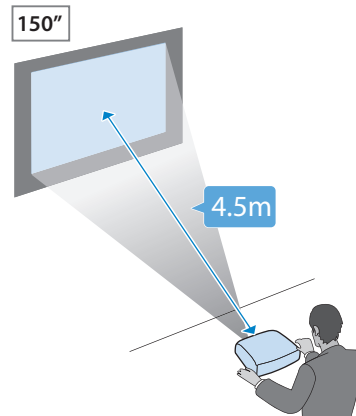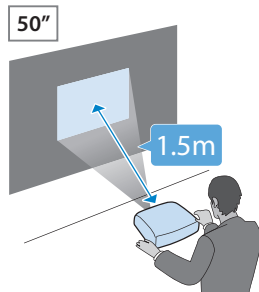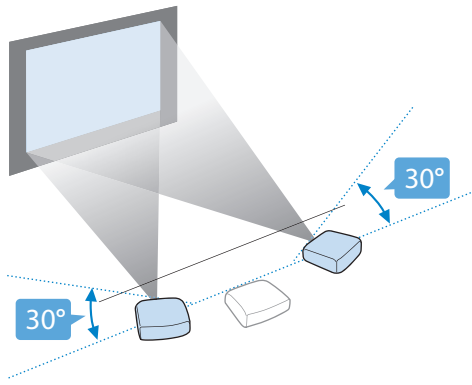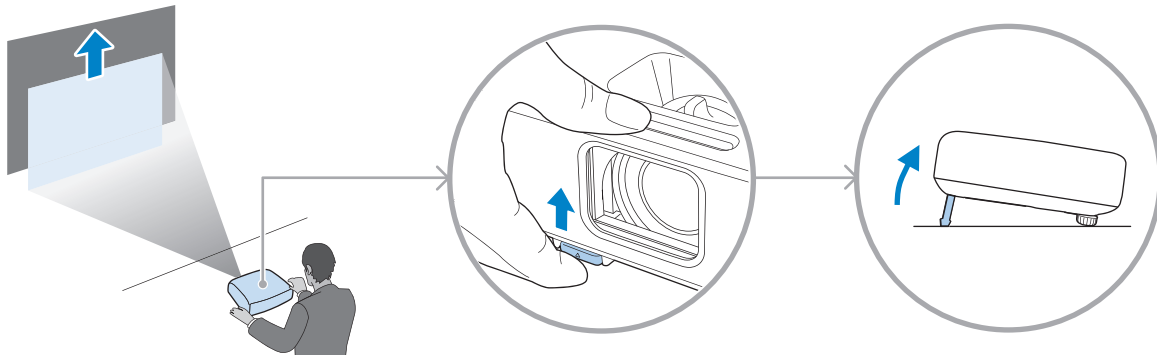



3

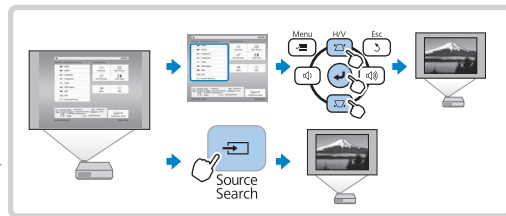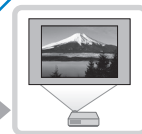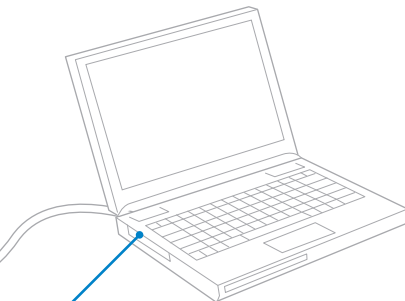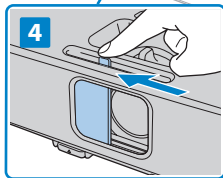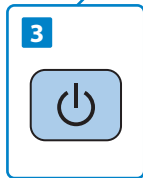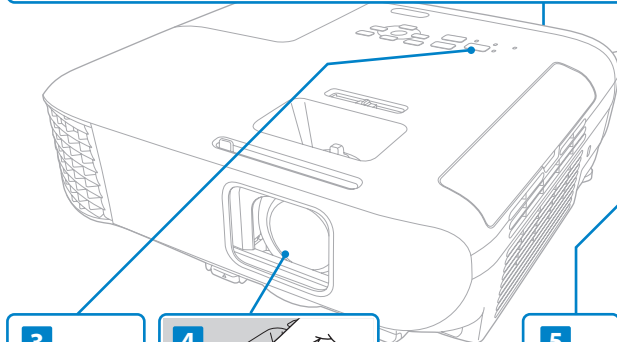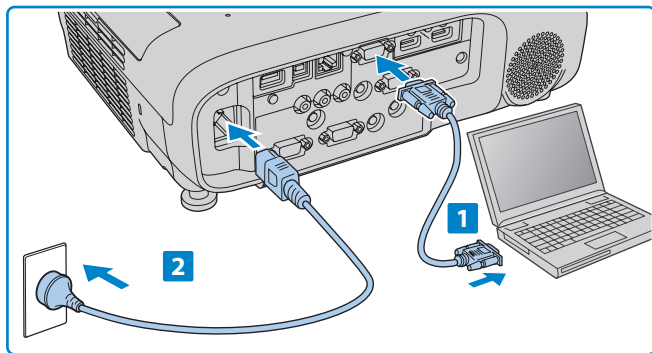        

 
EB-992F/EB-982W/EB-972/EB-118/EB-W49/EB-X49/  
EB-FH52/EB-W52/EB-W51/EB-X51/EB-FH06/EB-W06/  
EB-X06/EB-X500

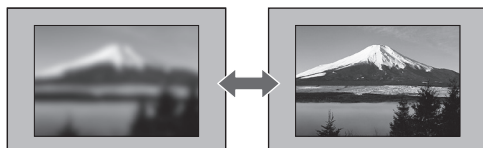


EB-E20/EB-E10/EB-E01/EB-E500

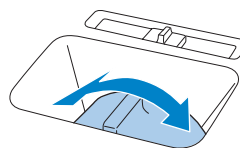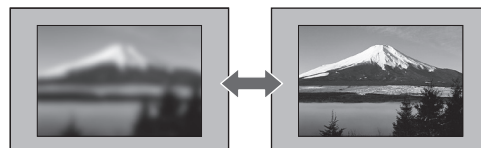  


 
EB-992F/EB-982W/EB-972/EB-118/EB-W49/EB-X49/  
EB-FH52/EB-W52/EB-W51/EB-X51/EB-FH06/EB-W06/  
EB-X06/EB-X500

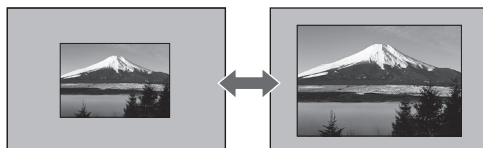

◀ T W ▶

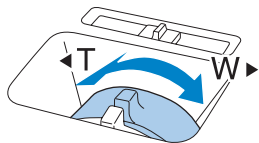 



EB-E20/EB-E10/EB-E01/EB-E500

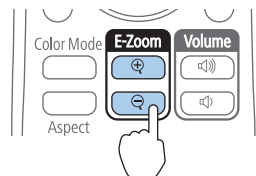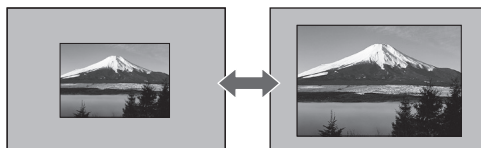  


5



 
 
5 Sec.

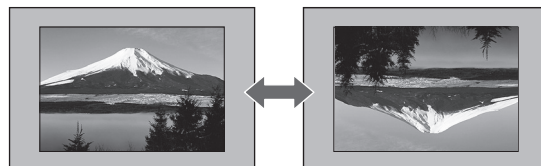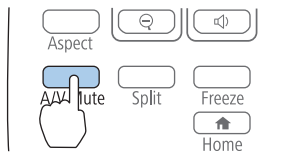

 EB-992F/EB-982W/EB-972/EB-118/EB-W49/EB-X49/EB-E20/EB-FH52/  
EB-W52/EB-W51/EB-X51/EB-FH06/EB-W06/EB-X06/EB-X500  
only

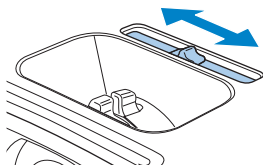

1

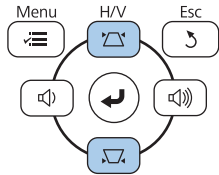  

2

