

Dell Pro Plus Wireless ANC Headset WL5024

User's Guide



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2023-2025 Dell Inc. All Rights Reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.


2025-06

Rev. A03

Contents

- What’s in the box.....3
- Overview.....4
- Specifications.....5
 - System Requirements.....5
 - Buttons and LEDs.....6
- Setting up the headset.....8
 - Charging the headset.....8
 - Connecting the headset.....10
- Dell Display and Peripheral Manager.....16
- Dell Audio.....16
- Replacing the ear cushions.....17
- Regulatory and PPID label.....19
- Troubleshooting.....20
- Charging power requirement.....23
- Statutory information.....26
- Safety information.....27
- Security information.....29
- Getting help.....30
 - Contacting Dell.....30


What's in the box

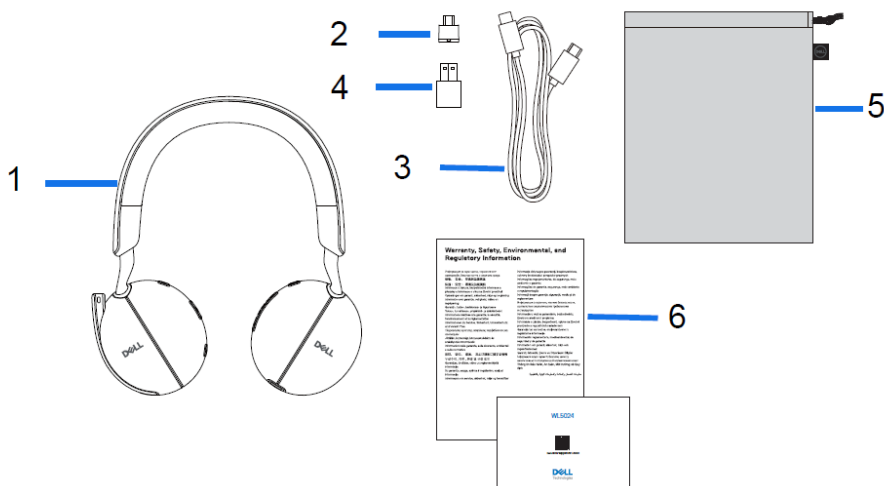

- 1. WL5024 headset
- 3. USB-C charging cable
- 5. Soft carry pouch

- 2. USB-C Wireless Audio Receiver
- 4. USB-A adapter
- 6. Documentations

Overview

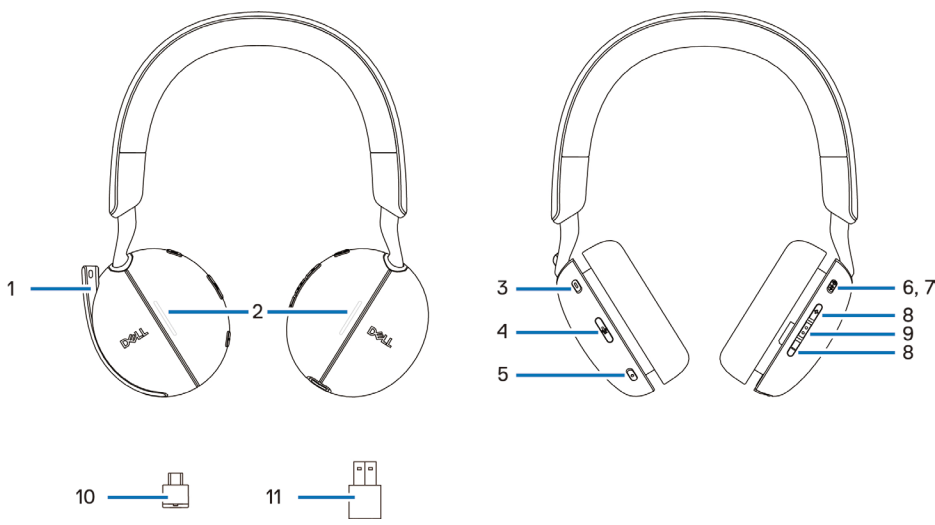

- 1. Discrete boom microphone
- 2. Busy light LED
- 3. Microsoft Teams button
- 4. Microphone mute button
- 5. ANC button
- 6. Power LED
- 7. Power/Bluetooth pairing button
- 8. Volume control button
- 9. Call control/multimedia button
- 10. USB-C Wireless Audio Receiver
- 11. USB-A adapter

Specifications

Specifications	Value
Headset weight	≤ 220 g
Headset dimensions	Width: 150 mm Height: 190 mm Depth: 70 mm
Microphones	Unidirectional microphone
Speaker	40 mm dynamic speaker
Speaker rated input power	50 mW
Speaker frequency range	20 Hz to 20 kHz
Operating temperature	0°C to 40°C (32°F to 104°F)
Storage temperature	-5°C to 45°C (23°F to 113°F)
Operating humidity	5% to 90% relative humidity

Compatible accessories (Sold separately)

Compatible replacement ear cushion	Dell Pro Plus Wired/Wireless Headset Ear Cushions - HE524
Replacement audio wireless receiver	Dell Wireless Audio Receiver – HR024
Charging stand	Dell Pro Plus Wireless Headset Charging Stand - HC524

System Requirement

Windows 10 64-bit, Windows 11 64-bit, and MacOS.

Buttons and LEDs

	Action Button	LED Behavior	Voice Prompt
Connect the headset to the computer when the Teams application is running		USB-C Wireless Audio Receiver LED displays purple light.	
Connect the headset to the computer when the Teams application is not running		USB-C Wireless Audio Receiver LED displays blue light.	
Play/pause music	Single press the call control button		
Volume up (step)	Single press the + button		Double beep when it reaches the maximum volume.
Volume up (continuously)	Press and hold the + button		Double beep when it reaches the maximum volume.
Volume down (step)	Single press the - button		Double beep when it reaches the minimum volume.
Volume down (continuously)	Press and hold the - button		Double beep when it reaches the minimum volume.
*Mute microphone	Single press on the mic mute button	USB-C Wireless Audio Receiver LED displays red light when you mute the headset during a call.	Mic off voice prompt.
Unmute microphone	Single press on the mic mute button	USB-C Wireless Audio Receiver LED displays green light when you unmute the headset during a call.	Mic on voice prompt.
Voice assistant	Long press the call control button		
**ANC control	Press the ANC button		ANC on, ANC off, or Transparency voice prompt.

Behavior when running Microsoft Teams application			
	Action Button	LED Behavior	Voice Prompt
During Teams call		- Busy light turns red.	
Evoke/Open Teams notification	Single press on the Teams button	- USB-C Wireless Audio Receiver LED blinks purple.	Teams voice prompt when receiving a Teams notification.
Answer a Teams call	Single press on the Call control button	- Busy light blinks red when receiving a Teams call and turns red during the call.	Teams voice prompt when receiving an incoming call.
End a Teams call	Double press on the Call control button	- Busy light turns off when a Teams call ends. - USB-C Wireless Audio Receiver LED displays purple light.	
Reject a Teams call	Long press on the Call control button for 2 seconds	- Busy light remains red during a Teams call. - USB-C Wireless Audio Receiver LED displays purple light.	
***Teams button long press event.	Long press on the Teams button		



***NOTE: If the boom microphone is rotated up, the mute button will not unmute the microphone.**




****NOTE: ANC is an Augmented Hearing experience, and hence the effect is depending on the environment noise, type of music being played, sensitivity of user hearing and other factors potentially effecting its performance. It is recommended for user to make sure headset is being worn at the correct position to ensure good earcup sealing, minimize potential leakages of external noise into the ear to have a good ANC effect.**



*****NOTE: For more detailed information on the Teams button behaviour, please refer to the <https://support.microsoft.com/en-us/office/use-the-microsoft-teams-button-on-your-certified-teams-device-ed5ec8f0-6f09-46aa-b80c-3372de084a98> [support.microsoft.com]**

Setting up the headset


Press and hold the power button for 1 second to turn on and off the headset. You hear power on and off voice prompt.

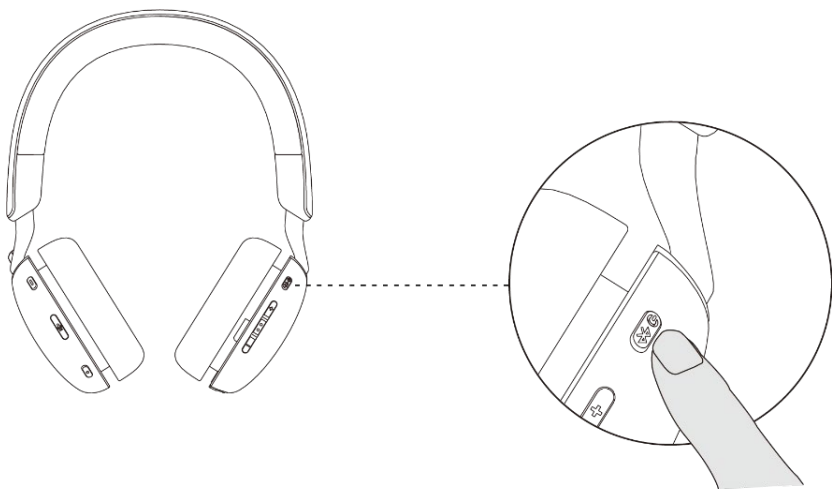


Charging the headset

European Union (EU) has a common charger requirement for wireless products that have embedded rechargeable battery. For more information about the EU charging power requirements, see Charging power requirement.

To charge the headset, connect the USB-C charging cable to the computer. Power LED and Busy light LED light up white during charging. Battery charging time to fully charge the headset is about 2.5 hour.

	Fully charged Power LED and Busy light LED turns off when fully charged.
	While charging Power LED and Busy light LED lights up white while charging.

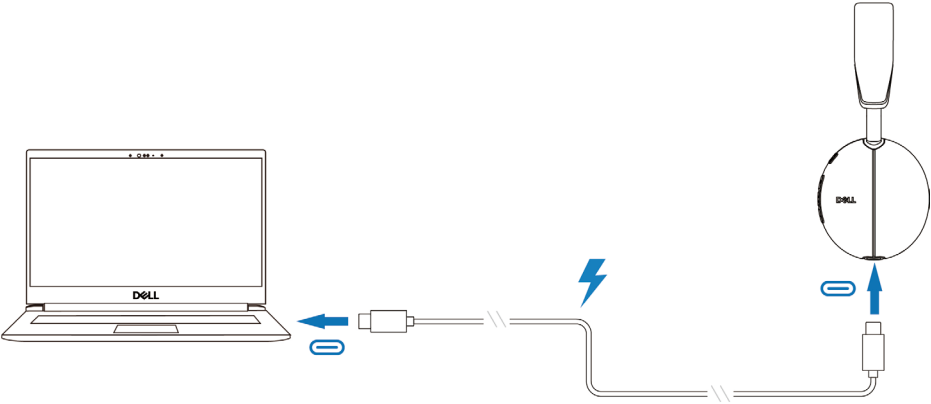

Battery Status

User can hear Battery high/medium/low voice prompt when turning on the headset.
battery high voice prompt when battery level at 70%~100%, battery medium voice prompt when battery level at 69%~10%, battery low voice prompt when battery level under 10% and right before power off.


Battery Life

Talk time	Up to 34hrs (ANC&Busy light off)/Up to 20hrs (ANC&Busy light on)
Listening time	Up to 78hrs (ANC off)/Up to 50hrs (ANC on)
Sleep mode	Headset turns into sleep mode after 4 hours of inactivity.


Connecting the headset

Bluetooth connection


Press and hold the power button for 3 seconds to start the pairing mode and you hear a Bluetooth pairing voice prompt. The power LED blinks blue in a fast pace while pairing. Once paired, the power LED lights up for 3 seconds and slowly blinks in blue.

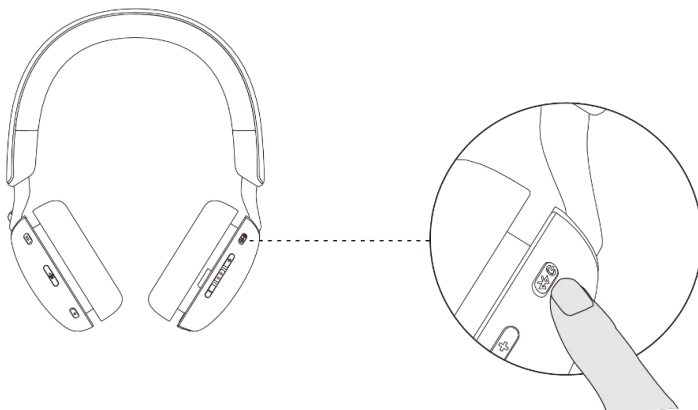


When pairing the headset to the computer through Windows Setting app, go to Add a device and select Dell WL5024 Headset to connect.

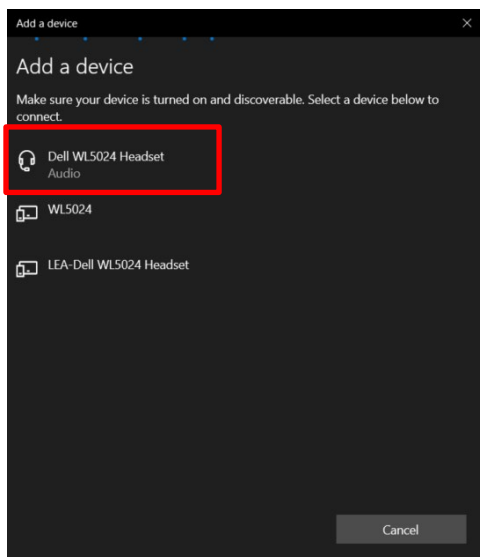

If your computer supports the Swift Pair function, you can use it to connect your headset to the computer.

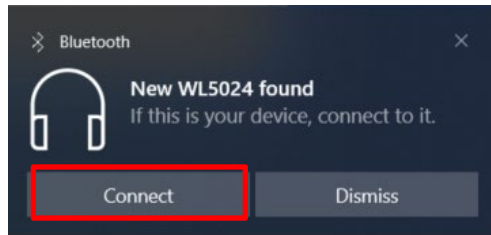

When the headset is connected to a computer successfully, select Headphones (Dell WL5024 Headset Stereo) for playback device.

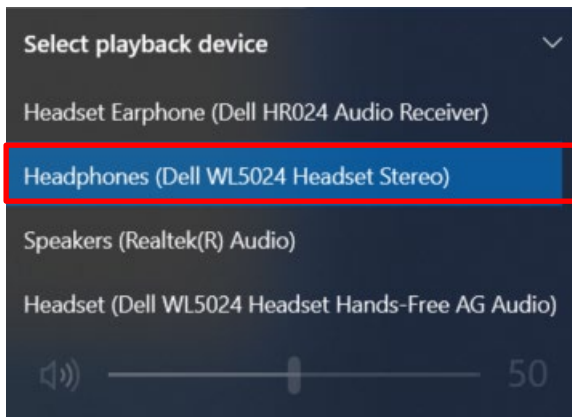

Bluetooth Dell Pair connection

Dell Pair supports the following:

- Detect Dell peripheral devices such as wireless headset, mouse, and keyboard.
- Seamlessly pair devices through Bluetooth.

Download and installation


Dell Pair is pre-installed on certain Dell computers. For more information on the list of Dell Pair compatible devices, see www.dell.com/support/kbdoc/000201693.

If the laptop model number is supported and Dell Pair is not available, then you can manually download and install the application.


1. Go to www.dell.com/support.
2. In the **Search support** box, enter the Service Tag of your computer and then click **Search**.
3. In the **Drivers & Downloads** section, download the Dell Pair executable file.
4. Follow the on-screen instructions to complete the installation. After the installation is complete, **Dell Pair** is available on **Windows** start menu.

Steps to pair through Dell Pair


1. Place your wireless headset next to the computer, and press the power button to turn on the headset.

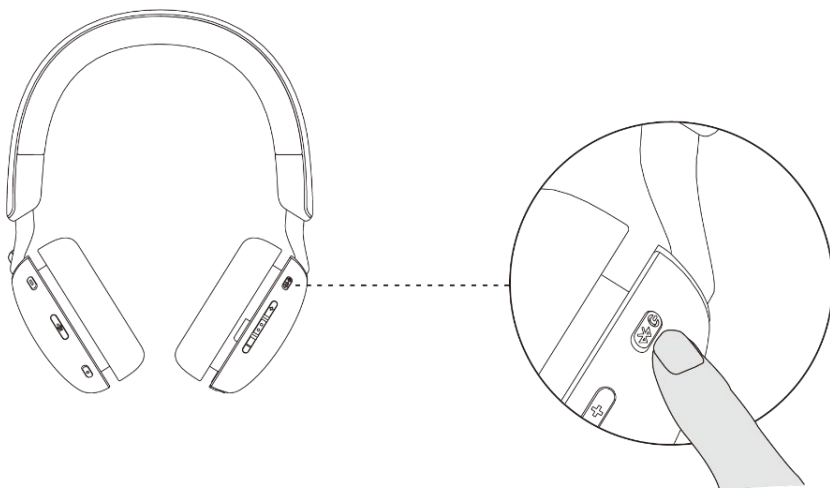

2. Press and hold the power button for 3 seconds, ensuring that the LED blinks blue, indicating the Bluetooth pairing has been initiated.

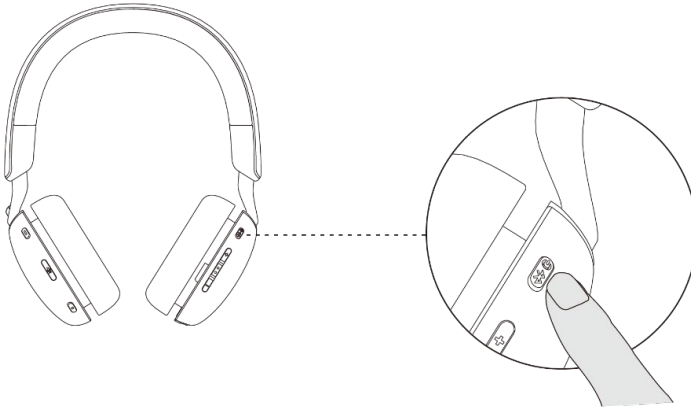

3. Dell Pair notifies when a supported device is turned on. Click Pair to begin a seamless Bluetooth pairing with the device.

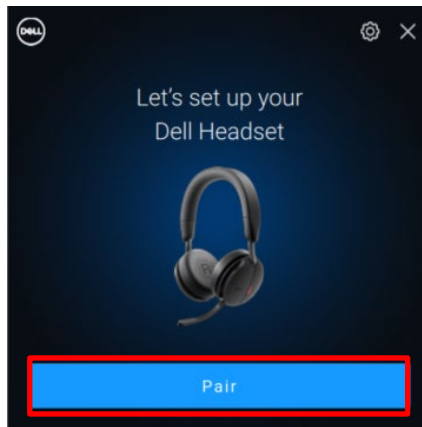


4. The wireless headset is ready for use once pairing is successful.

Wireless Audio Receiver connection


Connect the wireless audio receiver into a USB-A adapter and connect the adapter to the system or connect the wireless audio receiver directly to the system.

Power LED: lights up blue for 3 seconds and slowly blinks in blue when the headset is successfully connected to the device.

USB-C Wireless Audio Receiver LED: blinks blue when not connected and lights up blue when connected.

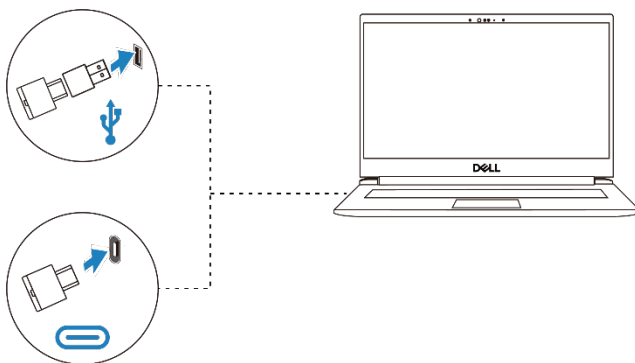


When the headset is connected to a computer successfully, select “Headset Earphone (Dell HR024 Audio Receiver)” for playback device.

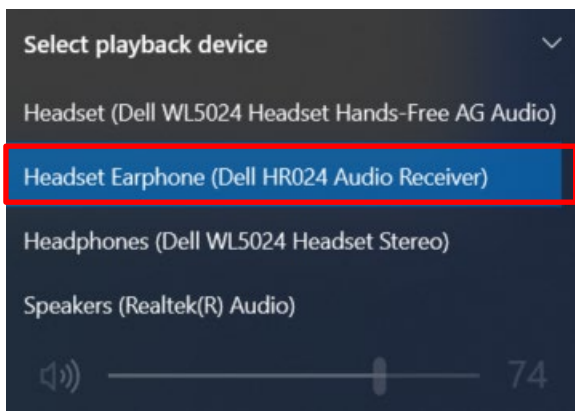


Adjust the headband

Lengthen or shorten the band until it fits comfortably. The ear cup can be adjusted to +90 degrees and -20 degrees at most. The cushions should sit comfortably over the center of your ears.

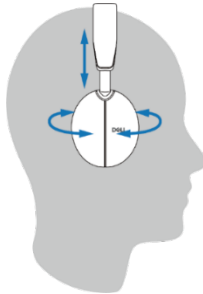

Position the boom

The discrete boom microphone should be worn on left side. Flip the boom mic arm down to unmute and flip up to mute. You hear voice commands mic unmute and mic mute, that indicate the status of the mic. The headset auto mutes or unmutes when the boom mic is flipped down 100 degrees or over, the full deployment angle is 130 degrees. You are unable to mute or unmute when the boom mic is not flipped down.

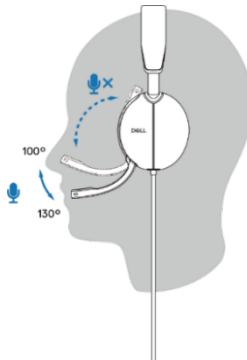

CAUTION: To avoid breaking the boom microphone, do not rotate over $\pm 130^\circ$.



NOTE: You experience the sidetone effect when you rub or scratch the microphone during a call. You can select your preferred sidetone level or disable it in DDPM.

Dell Display and Peripheral Manager

What is Dell Display and Peripheral Manager?

Dell Display and Peripheral Manager is an app that helps you set up and configure your Dell monitors and peripherals. With this app you can make changes to settings of the device and provide additional customization like Audio Mode, Microphone, Sidetone, Audio Output, Busy Light and more.

Installing Dell Display and Peripheral Manager

When you connect the device to your computer for the first time, you may be prompted to download and install the app.

NOTE: If the download prompt does not appear within a few minutes, you can manually install the software from Drivers & Downloads tab on www.dell.com/support/WL5024/downloads.

For more information, see the Dell Display and Peripheral Manager User's Guide in the Documentation tab.

Dell Audio

Dell Audio is a companion mobile app for your Dell wireless headset that enables you to personalize and enable headset features when you are paired to a smartphone.

Installing Dell Audio on your smartphone

To download this app, search for Dell Audio on the App Store (for iOS users) and on the Google Play Store (for Android users). Dell Audio app is compatible with iOS 14 and above and Android 11 and above.






NOTE: Dell Audio is available only in selected locations. Check the availability for your location in the app store.

Replacing the ear cushions




Removal

Hold the headset earpiece and gently pull the ear cushion from the middle front.

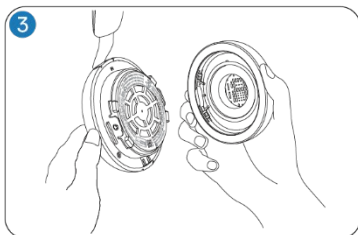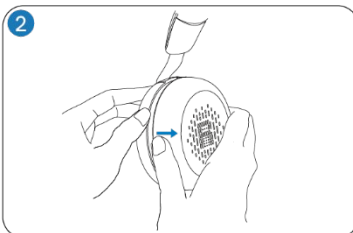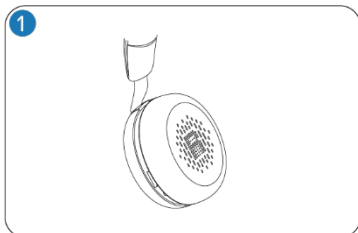

Replacement


Align the notch on the ear cushion with the corresponding point at the middle back of the ear cup and press it gently.

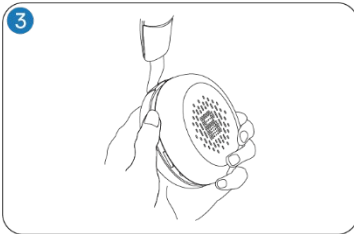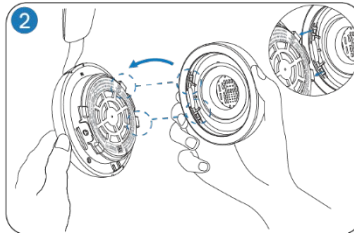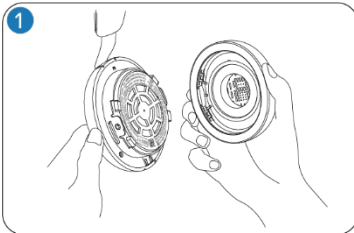

NOTE: Ensure that the R and L markings on the ear cushion are correctly positioned when replacing.

Regulatory and PPID label position

The regulatory labels and PPID (Product part identification) are under the ear cushion of both ear cups. Remove the ear cushion to find the regulatory labels and PPID.

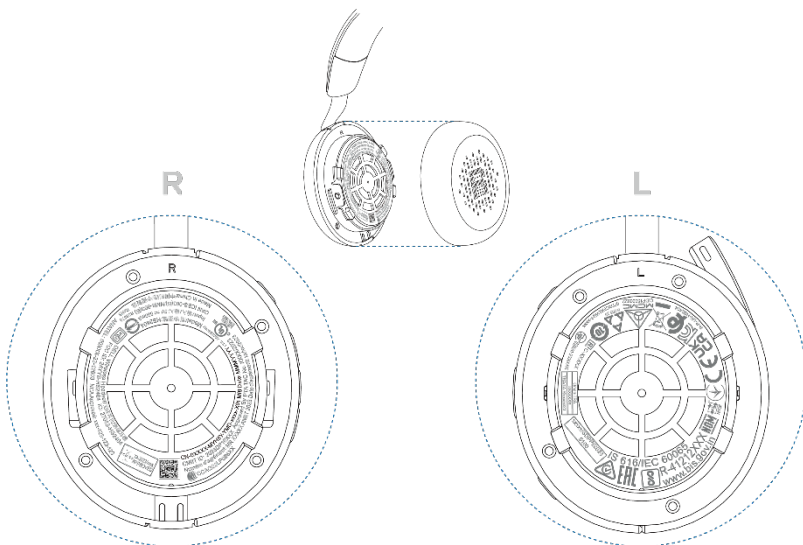

NOTE: The image is a sample illustration to show the regulatory label location only. Locate the ear cushion of your device to find the applicable regulatory labels or logos.


Troubleshooting

Headset does not turn on upon first use.	<ul style="list-style-type: none"> • Turn on the computer and use the charging cable to connect the headset to the computer. • Charge the headset by connecting the charging cable to a USB port on the computer. • Headset shipping mode ends, and the headset turns on.
I cannot hear the caller.	<ul style="list-style-type: none"> • Press the volume up button on your headset. Also, check and adjust the volume settings on your computer for accuracy. • Go to the audio settings in your sound control panel/preferences and select your headset as the default audio device.
Callers are unable to hear me.	<ul style="list-style-type: none"> • Unmute the microphone by flipping down the boom microphone arm and tap the mute button. • Ensure that the boom microphone is properly aligned with your mouth. • Go to the audio settings in your sound control panel/preferences and select your headset as the default audio device.
The audio in the headset is experiencing distortion, and I am hearing an echo.	<ul style="list-style-type: none"> • Lower the listen volume on your headset until the distortion disappears.
The other headset I was using to listen to music on my system/laptop does not work anymore.	<ul style="list-style-type: none"> • Go to the audio settings in your sound control panel/preferences and select your headset as the default audio device.
My computer is not able to detect the presence of the headset or establish a proper connection with it.	<ul style="list-style-type: none"> • Go to the audio settings in your sound control panel/preferences and select your headset as the default audio device.
It appears that the ANC feature is not working.	<ul style="list-style-type: none"> • Ensure that the headset is properly connected to the computer or reestablish the connection. • Verify the status of the ANC function by performing a single press on the ANC button. The voice prompt indicates the current ANC status. • Ensure that there are no other objects that are attached to the ear cup.
When I mute or unmute the microphone using the Windows system control panel settings, the following issue or set of issues arises: <ul style="list-style-type: none"> • It does not correctly reflect 	<ul style="list-style-type: none"> • Use the dedicated mute button on your headset to control the mute or unmute feature in Teams and Zoom. • The Human Interface Device (HID) Telephony controls mute or unmute feature on Zoom and Teams. The headsets mute button supports HID Telephony but not by the Windows mute settings. Click the mute control on Teams and Zoom to fix the slow

<p>the mute status on my headset or within applications such as Teams and Zoom.</p> <ul style="list-style-type: none"> · It results in delayed response on mute state in Teams and Zoom. · It displays error messages on Teams and Zoom. 	<p>response or error message.</p> <ul style="list-style-type: none"> ● Check the headset connection mode – audio receiver or Bluetooth. ● Connect using the audio receiver because headset buttons don't work when connected through Bluetooth.
<p>The sound coming through the headset appears to be at a lower or quieter level when I open the system control panel for audio devices.</p>	<ul style="list-style-type: none"> ● Close the control panel before using the headset to listen to music or audio. The headset has call and music modes with varying audio volumes. Accessing the system control panel temporarily switches it to call mode, but it reverts to music mode once you leave the control panel.
<p>Media key or volume control not working.</p>	<ul style="list-style-type: none"> ● The media key (play or pause) and volume control key work when the media is actively playing in the background.
<p>Headset button not working.</p>	<ul style="list-style-type: none"> ● Check the headset connection mode – audio receiver or Bluetooth. ● Connect using the audio receiver because headset buttons don't work when connected through Bluetooth.
<p>Dell Pair notification does not open when a Bluetooth devices turned on for the first time.</p>	<ul style="list-style-type: none"> ● Windows 10 (version 19041) is the oldest version to support Dell Pair. ● Bluetooth version 5.0 or later is available. ● Bluetooth is supported on the computer. It has turned on under Windows settings. ● The Bluetooth device supports detection by Dell Pair. ● If the Bluetooth device is within the computer's detection range, and if the peripheral being connected is a mouse or keyboard, then pick up the device and move it closer to the PC. ● Check that the computer and the Bluetooth devices have sufficient battery charge to operate. ● The Bluetooth device must be updated to the latest firmware. ● The Bluetooth controller on the computer is from Intel. ● Power cycle the Bluetooth device.
<p>Dell Pair reports a pairing error</p>	<ul style="list-style-type: none"> ● Proceed to reconnect through Dell Pair with the following steps: <ol style="list-style-type: none"> 1. If a Bluetooth device is near the computer or in pairing mode, or if Dell Pair UI assists with the pairing process. 2. Wait for pairing error window to auto-dismiss, and then remove the Bluetooth device from the computer. 3. Bring the Bluetooth device closer to the computer. 4. Ensure that the Bluetooth device is in pairing mode and the pairing LED is blinking.

Multiple devices with a (?) are found in Device Manager

- They are proprietary Bluetooth features or profiles that are supported by WL5024. They are crucial for the proper functionality of Android/iOS phones. Since Windows is not using these profiles, Device Manager displays a (?) when no driver is loaded for these profiles.

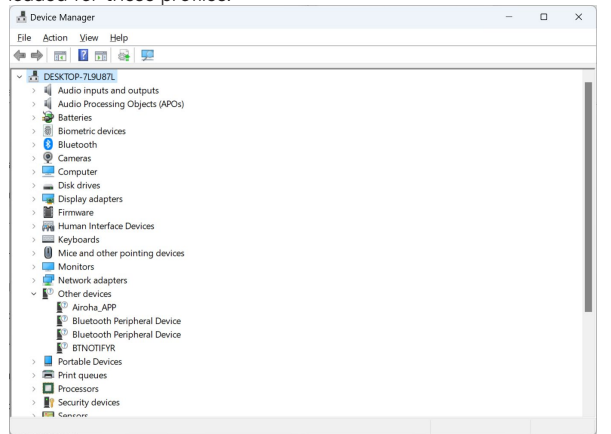

Charging power requirement:



NOTE: The information in this section is applicable only to the European Union (EU) countries.

Charging power requirement

The power delivered by the charger must be between minimum 2.5W required by the radio equipment, and maximum 2.5W in order to achieve the maximum charging speed.



Изискване за мощност на зареждане:

Мощността, осигурявана от зарядното устройство, трябва да е между минимум 2.5 W, изисквана от радиооборудването, и максимум 2.5 W, за да се постигне максимална скорост на зареждане.

Požadavek na nabíjecí výkon:

Aby bylo dosaženo maximální rychlosti nabíjení, musí být výkon dodávaný nabíječkou mezi minimem 2.5W požadovaným rádiovým zařízením a maximem 2.5W.

Strømkrav til opladning:

Den effekt, der leveres af opladeren, skal være mellem de minimale 2.5 W, der kræves af radioudstyret, og maksimaleffekten på 2.5 W for at opnå den maksimale opladningshastighed.

Charging power requirement:

The power delivered by the charger must be between minimum 2.5W required by the radio equipment, and maximum 2.5W in order to achieve the maximum charging speed.

Laadimisvõimsuse nõue:

maksimaalse laadimiskiiruse saavutamiseks peab laadija tarnitav võimsus jääma raadioseadmete nõutava minimaalse võimsuse 2.5W ja maksimaalse võimsuse 2.5W vahele.

Lataustehovaatimus:

Laturin tuottaman tehon on oltava radiolaitteen vaatiman minimin 2.5W ja maksimin 2.5W välillä maksimilatausnopeuden saavuttamiseksi.

Puissance requise pour le chargement:

L'alimentation fournie par le chargeur doit être comprise entre la puissance minimale requise par l'équipement radio (2.5 W) et la puissance maximale autorisée (2.5 W) afin d'atteindre la vitesse maximale de chargement.

Ladeanforderungen:

Die vom Ladegerät bereitgestellte Leistung muss zwischen mindestens 2.5W für die Funkgeräte und maximal 2.5W liegen, um die maximale Ladegeschwindigkeit zu erreichen.

Απαιτήση ισχύος φόρτισης:

Η ισχύς που παρέχει ο φορτιστής πρέπει να κυμαίνεται μεταξύ των ελάχιστων 2.5W που απαιτούνται από τον ραδιοεξοπλισμού και των μέγιστων 2.5W, προκειμένου να επιτευχθεί η μέγιστη ταχύτητα φόρτισης.

Töltési teljesítményigény:

A maximális töltési sebesség eléréséhez a töltő által leadott teljesítménynek a rádióberendezés által megkövetelt minimális 2.5W és a maximális 2.5W között kell lennie.

Requisiti di alimentazione per la ricarica:

L'alimentazione fornita dal caricabatterie deve essere compresa tra i 2.5W minimi richiesti dall'apparecchiatura radio e i 2.5W massimi, al fine di raggiungere la velocità di ricarica massima.

Uzlādes jaudas prasība.

Lādētāja nodrošinātajai jaudai jābūt no min. 2.5 W, kas nepieciešama radio aprīkojumam, un maks. 2.5 W, lai sasniegtu maksimālo uzlādes ātrumu.

Įkrovimo galios reikalavimai.

Kad būtų pasiektas didžiausias įkrovimo greitis, įkroviklio galia pagal radijo įrangos reikalavimus turi būti ne mažesnė kaip 2.5 W ir ne didesnė kaip 2.5 W.

Rekwizit dwar il-potenza tal-iċċarġjar:

Il-potenza pprovduta miċ-ċarġer trid tkun bejn il-minimu ta' 2.5W meħtieġ mit-tagħmir tar-radju tiegħek, u l-massimu ta' 2.5W biex tinkiseb il-veloċità massima tal-iċċarġjar.

Vereiste oplaadstroom:

De stroom die door de oplader wordt geleverd, moet tussen minimaal 2.5W, vereist door de radioapparatuur, en maximaal 2.5W zijn om de maximale oplaadsnelheid te bereiken.

Wymaganie dotyczące zasilania:

Zasilanie dostarczane przez ładowarkę musi znajdować się w zakresie od wartości minimalnej 2.5W wymaganej przez urządzenie radiowe po wartość maksymalną 2.5W zapewniającą ładowanie z maksymalną szybkością.

Requisito de potência de carregamento:

A potência fornecida pelo carregador deve situar-se entre o mínimo de 2.5 W exigido pelo equipamento de rádio e o máximo de 2.5 W, a fim de atingir a velocidade máxima de carregamento.

Cerință de alimentare pentru încărcare:

Alimentarea furnizată de încărcător trebuie să fie între minimum 2.5 W, valoare impusă de echipamentul radio, și maximum 2.5 W pentru a obține viteza maximă de încărcare.

Požiadavky na napájanie:

Na dosiahnutie maximálnej rýchlosti nabíjania musí byť výkon dodávaný nabíjačkou medzi minimom 2.5W požadovaným rádiovým zariadením a maximom 2.5W.

Zahteve glede moči napajanja:

Za najhitrejšje polnjenje mora napajalnik dovajati moč med najmanj 2.5 W (kar zahteva radijska oprema) in največ 2.5 W.

Requisito de carga:

La potencia suministrada a través del cargador debe de ser de entre 2.5 W y 2.5 W para obtener la velocidad de carga máxima en equipos de radio.

Strömförsörjningskrav för laddning:

Den ström som levereras av laddaren måste vara mellan minst 2.5W och högst 2.5W enligt radioutrustningens krav för att uppnå maximal laddningshastighet.

Требования к мощности для зарядки

Зарядное устройство должно подавать мощность в диапазоне от 2.5 Вт, согласно минимальному требованию для радиооборудования, до 2.5 Вт для достижения максимальной скорости зарядки.

Statutory information

Warranty

Limited warranty and return policy

Dell-branded products carry a 3-year limited hardware warranty. If purchased together with a Dell system, it will follow the system warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end-user agreement, which you can find at www.dell.com/terms. This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.


Dell may also provide an additional hardware warranty—full details of the Dell end user contract and warranty terms can be found by going to www.dell.com, selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty—full details of Dell's warranty terms can be found by going to www.dell.com, selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.

Safety information

To reduce the risk of fire, electric shock, personal injury, and property damage, read all operating instructions and the following safety instructions before using this device. Use only products and accessories designated for this device.

- If skin irritation develops after using this device, stop using the device and contact DELL.
- Do not let children play with small parts of the device, as they may enter the child's airways and cause choking.
- Do not disassemble the device as this may result in electric shock and other risks. Improper disassembly may cause electric shock if the phone is used again.
- If the device overheats or is damaged to the case, cord, or plug, unplug it and discontinue use.
-  Using the device at high volume levels or at elevated sound pressure levels may cause temporary or permanent damage to your hearing. There is no specific volume setting that works for everyone, however, you should always adjust the volume of your headset or headphones to a medium level and avoid prolonged exposure to high volumes. The louder the sound, the faster it will lead to hearing impairment. When you use a headset or headphones with different devices, the volume of the playback sound may differ. The volume of the emitted sound depends on the device used and its settings. If you experience any discomfort, you should stop using this device with a headset or headphones and have your hearing checked by a doctor. To protect your hearing, experts recommend the following
 1. Decrease the audio volume before turning on the headset / headphones, and use the volume as low as possible.
 2. Do not try to increase the volume in order to drown out the surrounding noise. If possible, use the headset / headphones in a calm environment with low background noise.
 3. Limit the time you use your headset / headphones at high volume levels.
 4. Decrease the volume if the sound from the headphones or headset interferes with the speech of people around you.
- If you use a headset or headphones while driving, check your local laws for mobile phones or headsets and focus on ensuring safe driving. Using a headset or earbuds covering both ears when driving, including bicycle, reduces your ability to hear other sounds and can pose a significant risk to you and others, and is illegal in most countries.
- If in-ear / in-ear headphones were supplied with this unit, connect and use them according to the instructions provided. Do not use force to insert the in-ear / in-ear headphones into the ear canal. If they get stuck in the ear canal, consult your doctor.
- Use only chargers supplied by DELL to charge your device and follow the charging instructions provided. In addition, if the headset is to be charged using a cell phone

charger, use only chargers approved and supplied by the cell phone manufacturer for that model. Do not use the charger for any other purpose. Make sure the operating voltage matches the voltage of the power supply.

Battery Safety

- If your device has a built-in, non-replaceable battery, do not attempt to open the device or replace the battery as this could result in personal injury and / or damage to the device.
- Do not throw the product or used batteries into fire or leave in places with temperatures above 45°C (104° F).

The equipment is intended for use in residential, commercial and non-congested industrial areas. The equipment belongs to class B for electromagnetic compatibility.

Terms and conditions of sale are specified in agreements with authorized resellers

The crossed out wheeled bin symbol indicates that used electrical and electronic equipment and batteries should not be disposed of with unsorted municipal waste; disposal of this type of waste should be carried out separately from other waste. The equipment meets the requirements of the Technical Regulations of the Customs Union "Electromagnetic compatibility of technical equipment" (TR CU 020/2011).

The equipment meets the requirements of the Technical Regulations of the Eurasian Economic Union "On the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products" (TR EAEU 037/2016).

Security information

NOTE: Your Bluetooth headset supports Bluetooth only for wireless communication. Any audio recording, or background listening is not enabled.

Bluetooth functionality:

- Audio playback (wireless music and media)
- Voice communication through the integrated microphone
- Basic controls such as volume adjustment, microphone on or microphone off
- Supports only the functions for basic operations and other Bluetooth services like file sharing are not enabled

NOTE: Your Bluetooth headset has an integrated microphone for phone calls and voice features.

Microphone functionality:

- Captures your voice only when you turn the microphone on, by flipping the boom mic down.
- Used for calls or voice apps when the headset is connected.

How to Control the microphone:

- Manually turn on the microphone when you want to use it.
- Turn off the microphone by flip up the boom mic, disconnecting the Bluetooth, or turn off the headset to stop microphone use. These actions help you stay in control of the microphone and protect your privacy.

• Privacy Info:

- The microphone is off by default and does not record or listen in the background.

Restoring headset to factory settings:

Restoring headset to factory setting will clear all the Bluetooth device list from your product and will reset all settings to factory default.

To factory reset the headset, perform the following steps:

1. Within a minute of turning on your headset, press and hold microphone button for 10 seconds. Headset are support both function (BT and dongle). If unable to reset during charging, then ignore.
2. When the reset is triggered, the **power LED** will blink for **3 seconds**.
3. After the reset is complete, headset will announce "power on".

Getting help

Contacting Dell



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

Steps:

1. Go to www.dell.com/support.
2. Select your support category.
3. Verify your country or region in the Choose a Country/Region drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.