

# **MEG Series**

**OLED Monitor** 

MEG 342C QD-OLED (3DC4)

User Guide

## **Contents**

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Installing the Rear I/O Cover	5
Adjusting the Monitor	6
Monitor Overview	7
Connecting the Monitor to PC	10
OSD Setup	11
Navi Key	11
Hot Key	11
OSD Menus	12
G.I	13
Gaming	14
Professional	16
Image	16
Input Source	17
PIP/PBP	18
Navi Key	19
Setting	19
MSI OLED Care	22
Specifications	24
Preset Display Modes	26
Troubleshooting	29
Safety Instructions	30
TÜV Rheinland Certification	32
Regulatory Notices	33

#### Revision

V1.1, 2023/05

# **Getting Started**

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

## **Package Contents**

Monitor	MEG 342C QD-OLED		
Documentation	Quick Start Guide		
	Stand with Screw(s)		
	Stand Base with Screw(s)		
	Mouse Bungee		
Accessories	Rear I/O Cover		
	Stand Cover		
	Screw(s) for Wall Mount Bracket(s)		
	Power Cord		
	DisplayPort Cable (Optional)		
	Ultra High Speed HDMI™ Cable (Optional)		
Cables	USB Type-C Cable (Optional)		
	USB Upstream Cable (Optional) (for USB Type-B Upstream Port)		
	3.5mm Combo Audio Cable (Optional)		




# 1 Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

### Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the stand to the monitor groove. Tighten the stand with screws.
- 2. Connect the base to the stand and tighten the screw to secure the base.
- 3. Align and push the stand cover towards the monitor groove until it locks in place.
- 4. Make sure the stand assembly is properly installed before setting the monitor upright.

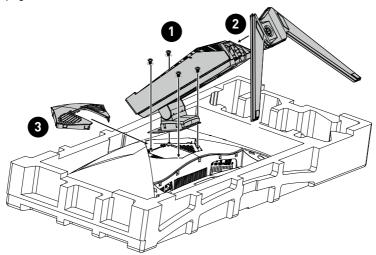


#### **Important**

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!



## Installing the Rear I/O Cover

Install the accompanied rear I/O cover as shown below.

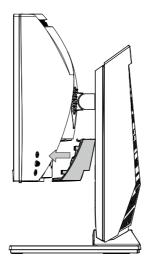


## **Adjusting the Monitor**


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.




# / Important

- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.

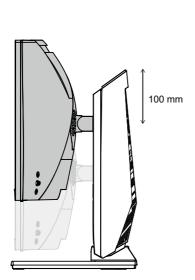

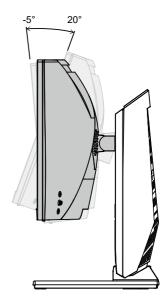

## **Monitor Overview**

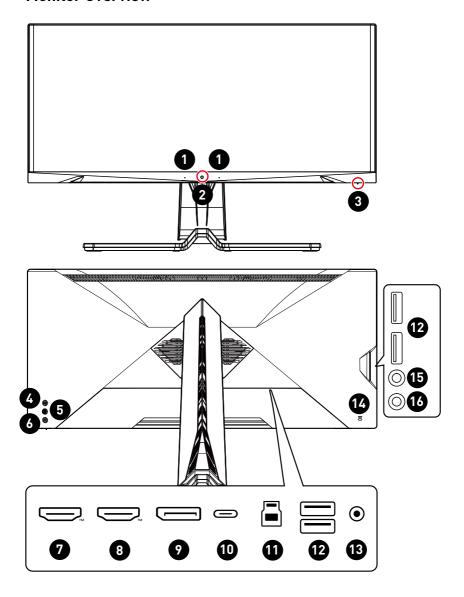


	·	
0	Microphone	
2	Light Sensor	
3	Power LED	
	Lit in white after the monitor is turned on. If no sig turn into orange. Lit in orange when the monitor is	
4	Macro Key	
	To activate OSD Application.	
5	Navi Key	
6	Power Button	
7	HDMI <sup>TM</sup> Connector HIGH-DEPRINDON MULTIMEDIA INTERFACE	
	Supports HDMI™ CEC, 3440x1440@175Hz as speci	ified in HDMI™ 2.1.
8	HDMI <sup>TM</sup> Connector HIGH-DEFINITION MULTIMEDIA INTERFACE	
	Supports 3440x1440@175Hz as specified in HDMI <sup>T</sup>	<sup>M</sup> 2.1.
9	DisplayPort	
	Supports 3440x1440@175Hz as specified in Displa	yPort 1.4.
1	USB Type-C Port	USB Type-C
	This port supports DisplayPort Alternate	Power Delivery 5V / 3A (15W)
	(DP Alt) Mode and up to 20V/3.25A (65W) power delivery.	9V / 3A (27W)
		12V / 3A (36W)
		15V / 3A (45W)
		20V / 3.25A (65W)
A	USB 3.2 Gen 1 Type-B Upstream Port	
W	For USB Upstream Cable.	
		Monitor
	Check the package for USB Upstream Cable and connect it to the PC and monitor. Once this cable is connected, the USB Type-A Downstream Ports on the monitor will be ready for use.	To PC
A	USB 3.2 Gen 1 Port	
	This connector is provided for USB peripheral dev	ices. (Speed up to 5 Gbps)

13	Combo Audio Jack
12	Kensington Lock
15	Microphone Jack
16	Headphone Jack

## Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Connect the power cord to the monitor power jack. (Figure A)
- 4. Plug the power cord into the electrical outlet. (Figure B)
- **5.** Turn on the monitor. (Figure C)
- **6.** Power on the computer and the monitor will auto detect the signal source.

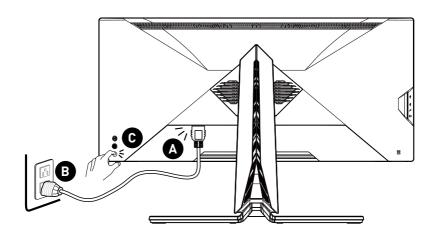

## **OSD Setup**

This chapter provides you with essential information on OSD Setup.




### **Important**

All information is subject to change without prior notice.

## **Navi Key**

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

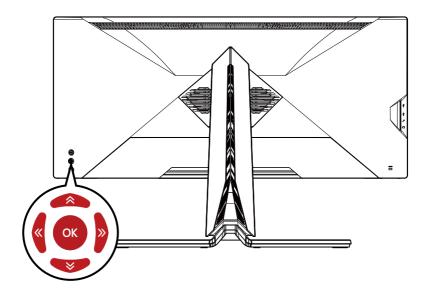

#### Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus


#### Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

### **Hot Key**

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

## **OSD Menus**

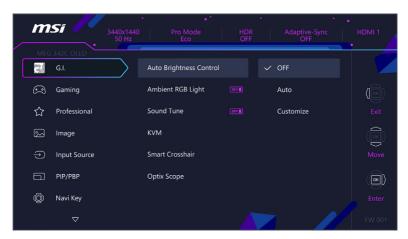



## ! Important

The following settings will be grayed out when HDR signals are received:

- Night Vision
- Low Blue Light
- Brightness
- Contrast
- Color Temperature

- Optix Scope
- Auto Brightness Control
- · Ambient RGB Light
- PIP/PBP

# G.I.

1st Level Menu	2nd/3rd Level Menu	Description	
Auto Brightness Control	OFF Auto Customize	ambient light and	
		<ul><li>auto brightness c</li><li>Activating Auto B</li></ul>	
		will affect:  Affected Function	Function Status
		» Brightness	Unable to select
Ambient RGB Light	OFF ON	Al algorithm, this the ambient color	temperature and light effects synced nt.
		Affected Function	Function Status
		» Low Blue Light	Set to OFF
		» Color Temperature	Unable to select
Sound Tune	OFF ON	Through the intermicrophone and a this function enal Cancellation (ANG)  For Sound Tune the computer nee	Al algorithm, bles Active Noise C) technology.
		to the USB Upstro	
KVM	Auto  Upstream  Type C  Auto allows the monival automatically switch input sources, such a mice or other USB de		tch between USB ch as keyboards,
		Users can also de port or USB Type signal source.	esignate Upstream -C as the only USB

1st Level Menu	2nd/3rd L	evel Menu	Description	
Smart Crosshair	Icon	None  [+]!!!	Through AI algor enhances the vis crosshair.  Users can select position of the cr	the color and
	Color	White Red		
	Position	Auto		
	Reset			
Optix Scope	Scope	Small	The center point	
	Size	Medium	Optix Scope is enabled, user ca adjust the details through the Size" and "Scope Ratio" setting	
		Large		
	Scope Ratio		Smart Crosshair     be enabled at the	and Optix Scope can
			Activating Optix S	
			Affected Function	Function Status
	OFF		» Adaptive-Sync	
	ON		» PIP/PBP	Set to OFF
			» Screen Size 1:1	Set to Auto

# Gaming

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	Premium Color	Use Up or Down Button to select and
	User	preview mode effects.
	FPS	Press the OK Button to confirm and apply your mode type.
	Racing	appty your mode type.
	RTS	
	RPG	

1st Level Menu	2nd/3rd Level Menu		Description			
Night Vision	OFF Normal Strong		This function optimizes background brightness and is recommended for FPS games.			
			Trogames.			
	Strongest					
	A.I.					
Refresh Rate	Location	Left Top		table in OSD Menu.		
		Right Top		tton to confirm and sh Rate Location.		
		Left Bottom	11.77	ows and works at the		
		Right Bottom		n's preset Screen		
		Customize				
	OFF					
	ON					
Alarm Clock	Location Left Top		After setting the time, press the OK			
		Right Top	Button to activate the timer.			
		Left Bottom	<ul> <li>Users have to manually restore the preset Alarm Clock after any AC</li> </ul>			
		Right Bottom	power loss and reconnection.			
		Customize				
	OFF					
	15:00	00:01 ~				
	30:00	99:59				
	45:00					
	60:00					
Adaptive-Sync	OFF		Adaptive-Sync pr	events screen		
	ON		tearing.	C		
				ve-Sync will affect:		
			Affected Function	Function Status		
			» Screen Size 1:1	Set to Auto		
			» PIP/PBP » Optix Scope	Set to OFF		

## **Professional**

1st Level Menu	2nd Level Menu	Description
Pro Mode	User Anti-Blue Movie Office	<ul> <li>Use Up or Down Button to select and preview mode effects.</li> <li>Press the OK Button to confirm and apply your mode type.</li> </ul>
	Adobe RGB	
	Display P3	
Low Blue Light	OFF ON	Low Blue Light protects your eyes against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.      When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.      This monitor is a Low Blue Light monitor which will decrease the blue light emitted without adjusting the OSD settings.      Activating Low Blue Light will affect:      Affected Function Function Status      Ambient RGB Light Set to OFF
Image	OFF	Image Enhancement enhances image
Enhancement	Weak	edges to improve their acutance.
	Medium	
	Strong	
	Strongest	

## **Image**

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	Properly adjust Brightness according to the surrounding lighting.
Contrast	0-100	Properly adjust Contrast to relax your eyes.
Sharpness	0-5	Sharpness improves clarity and details of images.

1st Level Menu	2nd/3rd Level Menu		Description	
Color	Cool		Use Up or Down Button to select and	
Temperature	Normal		preview mode effects.	
	Warm		Press the OK Button to confirm and apply your mode type.	
	Customization	R (0-100)	''''	t Color Temperature
		G (0-100)	in Customization	
		B (0-100)		
Screen Size	Auto 4:3 16:9		Users can adjust Screen Size in any mode, any resolution and any screen refresh rate.      Activating Screen Size 1:1 will affect:	
	21:9		Affected Function	Function Status
	1:1		» Adaptive-Sync » Optix Scope » PIP/PBP	Set to OFF
DisplayHDR	True Black 400 Peak 1000 nits		Users can set the DisplayHDR to True Black 400 or Peak 1000 nits.	

# **Input Source**

1st Level Menu	2nd Level Menu	Description
HDMI™ 1		Users can adjust Input Source in any mode.
HDMI™ 2		
DP		
Type C		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at below status:
	ON	Source at below status:
		<ul> <li>While "Auto Scan" is set to "OFF" with the monitor at power saving mode;</li> </ul>
		While "No Signal" message box is shown on the monitor.

## PIP/PBP

1st Level Menu	2nd/3rd L	evel Menu	Description		
OFF			PIP (Picture in Picture) allows users		
PIP	Source	HDMI™ 1	to simultaneously display multiple video sources on one screen. One program is displayed on the full screen at the same time as one or more other programs are displayed in		
		HDMI™ 2			
		DP			
		Type C	inset windows.	. a.me a. e a.eptayea	
	PIP Size	Small		Picture) is a similar	
		Medium	feature that disp	lays two input side on the screen.	
		Large	,	llows users to switch	
	Location	Left Top	between primary	and secondary input	
		Right Top	sources.		
		Left Bottom		ne signal input, the nd Audio Switch will	
		Right	be grayed out.		
		Bottom	Users can adjust	the ratio of window	
	5:	Customize	division by switching mode 1/2.		
	Display Sv		Activating PIP/PBP will affe		
	Audio Swi	tch	» Adaptive-Sync	Function Status	
PBP	Mode 1		» Optix Scope	Set to OFF	
	Mode 2	Г	» HDMI™ CEC		
	Source 1	HDMI™ 1	» Screen Size 1:1	Set to Auto	
		HDMI™ 2	» DisplayHDR	Unable to select	
		DP	» HDMI™ 2.1	Ollable to Select	
		Type C			
	Source 2	HDMI™ 1			
		HDMI™ 2			
		DP			
		Type C			
	Display Switch				
	Audio Switch				

# Navi Key

1st Level Menu	2nd Level Menu	Description
Up	1	All Navi Key items can be adjusted via
Down	Brightness	OSD Menus.
Left	Game Mode	
Right	Smart Crosshair	
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	Night Vision	
	Optix Scope	
	KVM	

# Setting

1st Level Menu	2nd Level Menu	Description			
Language	繁體中文	Users have to press the OK Button			
	English	to confirm and apply the Language setting.			
	Français	Language is an independent setting.			
	Deutsch	Users' own language setting will			
	Italiano	override the factory default. When users set Reset to Yes, Language will			
	Español	not be changed.			
	한국어				
	日本語				
	Русский				
	Português				
	简体中文				
	Bahasa Indonesia				
	Türkçe				
	(More languages coming soon)				
Transparency	0~5	Users can adjust Transparency in any mode.			

1st Level Menu	2nd Level Menu		Description	
OSD Time Out	5~30s		Users can adjust OSD Time Out in any mode.	
Audio Source	Analog		Make sure the audio cable is well	
	Digital		connected between monitor and computer before selecting Analog Source.	
SpectrumBar	OFF		Users can adjust SpectrumBar to	
	MSI - Mystic Ligh	t	MSI - Mystic Light, MSI - Glow Sync or OFF.	
	MSI - Glow Sync		3. 3	
	RGB Brightness	20%	Users can adjust RGB Brightness.	
		40%		
		60%		
		80%		
		100%		
Power Button	OFF		When set to OFF, users can press the power button to turn off the monitor.	
	Standby		When set to Standby, users can press the power button to turn off the panel and backlight.	
Info. On	OFF		• The information of the monitor status	
Screen	ON		will be shown on the right side of the screen.	
HDMI™ 2.1	Console		To reach maximum resolution of	
	PC		3440x1440@175Hz, users have to set HDMI™ 2.1 to PC.	

1st Level Menu	2nd Level Menu	Description
HDMI™ CEC	OFF ON	HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable.
		If HDMI™ CEC is set to ON:     The monitor will automatically power on when the CEC device is turned on.
		The CEC device will enter power saving mode when the monitor is turned off.
		<ul> <li>When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Game Mode and Pro Mode will be automatically set to default modes and can be adjusted to users' preferred modes later.</li> </ul>
Type C PD	OFF	Type-C PD Charge enables users to
Charge	ON	charge their devices through a USB Type-C connector, which can deliver up to 65W [20V/3.25A].
Reset	YES	Users can Reset and restore settings
	N0	to original OSD Default in any mode.

## **MSI OLED Care**

1st Level Menu	2nd/3rd Level Menu	Description		
Pixel Shift	Slow	Pixel Shift moves the pixels of your		
	Normal	screen at regular intervals to reduce the possibility of screen burn-in or		
	Fast	image retention.		
Panel Protect	Short Time	To maintain panel image quality, panel protect (short time) function will automatically activate when monitor using over 4 hours.		
		This protect function may take several minutes to complete.		
		The power indicator will blink orange color until process done.		
		During process executing, please do not unplug the power cord from monitor.		
		During process executing, press power button again to cancel this function.		
	Long Time	To maintain panel image quality, panel protect (long time) function will automatically activate when monitor using over 1,500 hours.		
		This protect function may take an hour to complete.		
		The power indicator will blink white color until process done.		
		You may see a line scrolling on the screen during the process, which is normal and not a malfunction.		
		During process executing, please do not unplug the power cord from monitor.		
		During process executing, press power button again to cancel this function.		

1st Level Menu	2nd/3rd Le	evel Menu	Description	
Static Screen	OFF		• If Static Screen Detection is set to ON:	
Detection	ON		When detecting static visuals over long periods of time, the monitor reduces brightness to prevent screen burn-in.	
			Once detecting moving visuals, the monitor restores its previous brightness setting.	
	Starting	50 Sec	Starting in detects the time a static	
	in	100 Sec	image remains on the screen.	
	Time required	120 Sec	Time required specifies the time for	
		240 Sec	brightness reduction after detecting a static image for 50/100 seconds.	
			The brightness reduction level depends on the setting of Reducing Level.	
	Reducing Level	1-7	Users can select a level for brightness reduction.	
			Reducing effect depends on Brightness/DisplayHDR setting.	
OLED Panel Info.	OLED Panel Info.		This field shows the information of MSI OLED Care.	

# **Specifications**

Monitor	MEG 342C QD-OLED			
Size	34 inch			
Curvature	1800R			
Panel Type	OLED			
Resolution	3440 x 1440 (UWQHD)			
Aspect Ratio	21:9			
Duinktures	• SDR: 250 nits (typ.)			
Brightness	• HDR Peak: 1000 nits			
Contrast Ratio	1000000:1			
Refresh Rate	175Hz			
Response Time	0.03ms (GTG)			
	HDMI™ Connector x 2			
	• DisplayPort x 1			
	• USB Type-C Port x 1			
1/0	• USB 3.2 Gen 1 Type-B Upstream Port x1			
1,0	• USB 3.2 Gen 1 Port x4			
	Headphone Jack x1			
	Microphone Jack x1			
	Combo Audio Jack x 1			
View Angles	178°(H) , 178°(V)			
DCI-P3*/ sRGB	99.3%/ 139.1%			
Surface Treatment	Anti-Reflection			
Display Colors	1.07B (10 bits)			
Monitor Power Options	100~240Vac, 50/60Hz, 3.5A			
	Power On < 280W			
Power Consumption (Typical)	Standby < 0.5W			
(тургеас)	Power Off < 0.3W			
Adjustment (Height)	0 ~ 100mm			
Adjustment (Tilt)	-5° ~ 20°			
Adjustment (Swivel)				
Adjustment (Pivot)				
Kensington Lock	Yes			

Monitor		MEG 342C QD-OLED		
		• Plate Type: 100 x 100 mm		
		• Screw Type: M4 x 10 mm		
VESA Mountin	g	• Thread Diameter: 4 mm		
		• Thread Pitch: 0.7 mm		
		Thread Length: 10 mm		
Dimension (W	x H x D)	814.3 x 463.4 x 292.6 mm		
Weight	Net	9.3 kg		
Weight	Gross	13.9 kg		
		• Temperature: 0°C to 40°C		
	Operating	Humidity: 20% to 90%, non-condensing		
Environment		• Altitude: 0 ~ 5000m		
	Storago	• Temperature: -20°C to 60°C		
	Storage	• Humidity: 10% to 90%, non-condensing		

<sup>\*</sup> Based on CIE1976 test standards.

# **Preset Display Modes**



All information is subject to change without prior notice.

s	Standard Resolution		MEG 342C QD-OLED		
Standard			HDMI™	DP	Type-C
VGA	640x480	@60Hz	٧	V	V
		@67Hz	٧	V	V
		@72Hz	٧	V	V
		@75Hz	٧	V	٧
SVGA	800x600	@56Hz	٧	V	٧
		@60Hz	٧	V	٧
		@72Hz	٧	V	٧
		@75Hz	٧	V	٧
XGA	1024x768	@60Hz	٧	V	٧
		@70Hz	٧	٧	<b>V</b>
		@75Hz	٧	٧	<b>V</b>
SXGA	1280x1024	@60Hz	٧	V	٧
		@75Hz	٧	V	٧
WXGA+	1440x900	@60Hz	٧	V	٧
WSXGA+	1680x1050	@60Hz	V	V	V
Full HD	1920x1080	@60Hz	٧	V	٧
QHD	2560x1440	@60Hz	٧	V	٧
		@120Hz	٧	V	٧
UWQHD	3440x1440	@50Hz	٧		
		@60Hz	V *	٧	V
		@100Hz	٧	٧	V
		@144Hz	V *	V	V
		@175Hz	V *	V	V

Chandand	Resolution		MEG 342C QD-OLED			
Standard			HDMI™	DP	Type-C	
Video	480P	480P		V	V	
Timing Resolution	576P		V	V	V	
Resolution	720P		V	V	V	
	1080P	@60Hz	V	V	V	
		@120Hz	V	V	V	
	2160P	@30Hz	V			
		@50Hz	V			
		@60Hz	V			
		@120Hz	V			

<sup>\*</sup> Users have to set HDMI™ 2.1 to PC.

Chandand	Resolution		PIP Mode w/o HDR			
Standard			HDMI™	DP	Type-C	
Full HD	1920x1080	@60Hz	V	V	٧	
QHD	2560x1440	@60Hz	V	V	V	
WUQHD	3440x1440	@50Hz	V			
		@60Hz	V	V	V	
Video	480P		V	V	V	
Timing Resolution	576P		V	V	V	
resolution	720P		V	V	V	
	1080P	@60Hz	V	V	V	
	2160P	@30Hz	V	V		
		@50Hz	V	V		
		@60Hz	V	V		

Standard	Resolution		PBP Mode 1 w/o HDR		
			HDMI™	DP	Type-C
Full HD	1920x1080	@60Hz	V	V	V
Video Timing Resolution	480P		V	V	V
	576P		V	V	V
	720P		V	V	V
	1080P	@60Hz	V	V	V
	2160P	@30Hz	V	V	
		@50Hz	V	V	
		@60Hz	V	V	
Used for PBP Full Screen	860x1440	@60Hz	V	V	V
	2580x1440	@60Hz	V	V	V

Standard	Resolution		PBP Mode 2 w/o HDR		
			HDMI™	DP	Type-C
Full HD	1920x1080	@60Hz	V	V	V
QHD	2560x1440	@60Hz			V
Video Timing Resolution	480P		V	V	V
	576P		V	V	V
	720P		V	V	V
	1080P	@60Hz	V	V	V
	2160P	@30Hz	V	V	
		@50Hz	V	V	
		@60Hz	V	V	
Used for PBP Full Screen	1720x1440	@60Hz	V	V	V

# **Troubleshooting**

#### The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

#### No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

#### The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

#### No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

### The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

#### The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

## Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

#### Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

### **Battery**

Please take special precautions because this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

#### **European Union:**



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

#### BSMI:



#### 廢雷池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

#### California. USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

#### **Environment**

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening: that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the device.
  - The device has been exposed to moisture.
  - The device does not work well or you can not get it working according to the User Guide.
  - The device has dropped and damaged.
  - The device has obvious sign of breakage.

## **TÜV Rheinland Certification**

## TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

### TÜV Rheinland Flicker Free Certification

 TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.



- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

## Regulatory Notices

## **CE Conformity**

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

### FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

#### MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA [626] 913-0828

www.msi.com

#### WFFF Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



#### Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

#### RoHS Statement

#### Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

#### India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

### Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

#### Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, № 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

#### Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

#### Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

## **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- · Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

### Warning!

Overuse of screens is likely to affect eyesight.

#### Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

## Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator, Inc.

## **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.