

MAG Series LCD Monitor

MAG 27C6X (3CE0)

User Guide

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
)SD Setup	9
Navi Key	9
Hot Key	9
)SD Menus	0
Gaming1	0
Professional1	3
Image 1	4
Input Source 1	4
PIP/PBP 1	5
Navi Key 1	6
Settings 1	6
Specifications1	8
Preset Display Modes2	20
roubleshooting2	23
Safety Instructions	24
ÜV Rheinland Certification2	26
Regulatory Notices	27

Revision

V1.1, 2024/10

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents


Monitor	MAG 27C6X	
Documentation	Quick Start Guide	
Accessories	Stand	
	Stand Base	
	Power Cord	
Cables	DisplayPort Cable (Optional)	



- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country and model.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand

- 1. Leave the monitor in its protective packaging. Align and gently push the stand bracket towards the monitor groove until it locks in place.
- 2. Align and gently push the cable organizer towards the stand until it locks in place.
- **3.** Align and gently push the base towards the stand until it locks in place.
- **4.** Make sure the stand assembly is properly installed before setting the monitor upright.

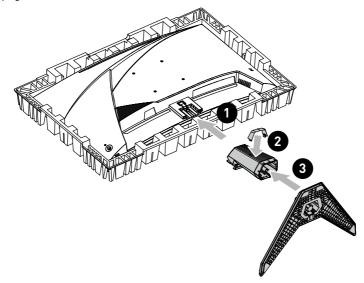

🕼 Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The back of the monitor can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!




Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.



Avoid touching the display panel when adjusting the monitor.




Monitor Overview

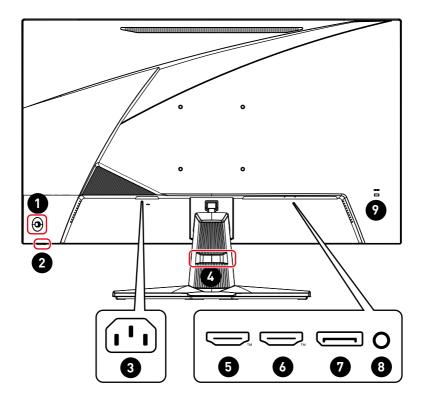

1	Navi Key & Power Button
•	-
2	Power LED Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
3	Power Jack
4	Cable Organizer
5	
	Supports HDMI™ CEC, 1920x1080@240Hz as specified in HDMI™ 2.0b.
	Important
	To ensure optimal performance and compatibility, please use only HDMI™ cables certified with the official HDMI™ logo when connecting this monitor. For more information, please visit <u>https://www.hdmi.org/resource/cables</u> .
6	
	Supports 1920x1080@240Hz as specified in HDMI™ 2.0b.
	Important
	To ensure optimal performance and compatibility, please use only HDMI™ cables certified with the official HDMI™ logo when connecting this monitor. For more information, please visit <u>https://www.hdmi.org/resource/cables</u> .
7	DisplayPort
	Supports 1920x1080@250Hz as specified in DisplayPort 1.4a.
8	Headphone Jack
9	Kensington Lock

Connecting the Monitor to PC

- **1.** Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Connect the power cord to the monitor power jack. (Figure A)
- 4. Plug the power cord into the electrical outlet. (Figure B)
- 5. Turn on the monitor. (Figure C)
- 6. Power on the computer and the monitor will auto detect the signal source.

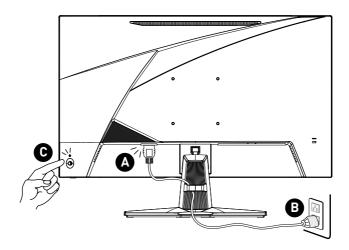

OSD Setup


This chapter provides you with essential information on OSD Setup.

Important

All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

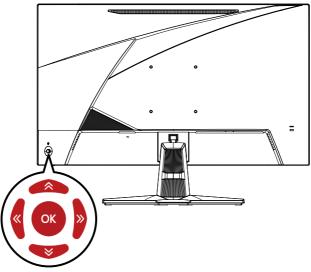

Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

(MSi 1920 X	1080 60 HZ	HDR OFF	Adaptive-Sync ON	DP
	Gaming	Game Mode		✓ User	
☆	Professional	Night Vision		FPS	Exit
5	Image	Al Vision	OFF	Racing	Exit
Ð	Input Source	Response Time		RTS	(@)
6	PIP/PBP		OFF	RPG	Move
ල්	Navi Key	Refresh Rate			
ŝ	Settings	Alarm Clock			
		-			Enter FW .001

Important

The following settings will be grayed out when HDR signals are received:

- Night Vision
- MPRT
- Low Blue Light
- HDCR

- Al Vision
- Brightness
- Contrast
- Color Temperature

Gaming

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	User	 Use Up or Down Button to select and preview mode effects.
	FPS	 Press the OK Button to confirm and apply your
	Racing	mode type.
	RTS	
	RPG	
Night Vision	OFF	 This function optimizes background brightness and is recommended for FPS games.
	Normal	and is recommended for FFS games.
	Strong	
	Strongest	
	A.I.	

1st Level Menu	2nd/3rd Lev	vel Menu	De	escription			
Al Vision	OFF ON					Al Vision enhances imag the contrast of images a brightness. Activating Al Vision will a Affected Function	nd background
				» MPRT » HDCR » Brightness » Night Vision	Set to OFF Unable to select		
Response Time	Normal Fast Fastest		1	Setting to Fastest will re response time and help when playing very fast g	improve blurred images		
MPRT	OFF ON			the refresh rate is over ect: Function Status			
				 » Response Time » Brightness » Adaptive-Sync » HDCR » PIP/PBP » AI Vision 	Unable to select Set to OFF		
Refresh Rate	Location	Left Top Right Top Left Bottom Right Bottom Customize	•	Location is adjustable in OK Button to confirm an Rate Location. This monitor follows and System's preset Screen	d apply your Refresh d works at the Operating		
	OFF ON	·					

1st Level Menu	2nd/3rd Lev	vel Menu	Description	
Alarm Clock Screen Assistance	210/310 Lev Location 0FF 15:00 30:00 45:00 60:00 None Icon Icon Icon Icon Icon Icon Icon Icon	Left Top Right Top Left Bottom Customize 00:01 ~ 99:59	 After setting the time, practivate the timer. Users have to manually Alarm Clock after any Arreconnection. Users can adjust Screen 	restore their preset C power loss and
	Position			
	Reset			
Adaptive-Sync	OFF ON		 Adaptive-Sync prevents * HDMI™ VRR (Variable synchronizes with Adapt is disabled. Activating Adaptive-Sync 	Refresh Rate) ive-Sync (ON/ OFF) and
			Affected Function » MPRT » PIP/PBP	Function Status Set to OFF

Professional

1st Level Menu	2nd Level Menu	Description					
Pro Mode	Eco User Anti-Blue	 Use Up or Down Button to select and preview mode effects. Press the OK Button to confirm and apply your mode type. Activating sRGB will affect: 					
	Movie	Affected Function Function Status					
	Office	» Color Temperature » Low Blue Light Unable to select					
	sRGB						
Low Blue Light	OFF ON	 Low Blue Light protects your eyes against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow. When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light. 					
HDCR	OFF ON	HDCR enhances image quality by increasing the contrast of images. Activating HDCR will affect:					
		Affected Function Function Status					
		» MPRT Set to OFF » Brightness Unable to select					
MPRT	OFF ON	MPRT is available when the refresh rate is over 85Hz. Activating MPRT will affect:					
		Affected Function Function Status					
		» Response Time » Brightness Unable to select					
		 » Adaptive-Sync » HDCR » PIP/PBP » Al Vision 					
Image Enhancement	OFF	Image Enhancement enhances image edges to improve					
	Weak	their acutance.					
	Medium						
	Strong]					
	Strongest						

Image

1st Level Menu	2nd/3rd Level Menu		Description
Brightness	0-100		 Properly adjust Brightness according to the surrounding lighting.
Contrast	0-100		• Properly adjust Contrast to relax your eyes.
Sharpness	0-5		 Sharpness improves clarity and details of images.
Color Temperature	Cool		Use Up or Down Button to select and preview mode effects
	Normal		 Press the OK Button to confirm and apply your
	Warm		mode type.Users can adjust Color Temperature in
	Customization	R (0-100)	Customization mode.
		G (0-100)	
		B (0-100)	
Screen Size	Auto	,	• Users can adjust Screen Size in any mode, any
	4:3		resolution and any screen refresh rate.
	16:9		

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™ 1		• Users can adjust Input Source in any mode.
HDMI™ 2		
DP		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at below status:
	ON	 While "Auto Scan" is set to "OFF" with the monitor at power saving mode; While "No Signal" message box is shown on the monitor.

PIP/PBP

1st Level Menu	2nd/3rd Level Menu		Des	scription	
OFF			PIP (Picture in Picture) allows users to simultaneously display multiple video sources		
PIP	Source	HDMI™1	on one screen. One program is displayed o		ram is displayed on the
		HDMI™2		ull screen at the same t ther programs are disp	ilme as one or more llayed in inset windows.
		DP		PBP (Picture by Picture) hat displays two input s	
	PIP Size	Small	t	he screen.	
		Medium)isplay Switch allows us rimary and secondary i	
		Large		f there is only one signa Switch and Audio Switch	
	Location	Left Top	• 4	activating PIP/PBP will a	affect:
		Right Top	l F	Affected Function	Function Status
		Left Bottom	I F	» Response Time	Unable to select
			4	» MPRT » Adaptive-Sync	Set to OFF
		Right Bottom	I F	» HDMI™ CEC	Set to OFF &
	Display Swit	ch		» DP Overclocking	unable to select
	Audio Switch	ı			
PBP	Source 1	HDMI™1			
		HDMI™2			
		DP			
	Source 2	HDMI™1			
		HDMI™2			
		DP			
	Display Switch				
	Audio Switch	1			

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	• All Navi Key items can be adjusted via OSD Menus.
Down Left	Brightness	
Right	Game Mode	
	Screen Assistance	
	Alarm Clock	
	Input Source	
	PIP/PBP	
	Refresh Rate	
	Info. On Screen	
	Night Vision	

Settings

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	 Users have to press the OK Button to confirm and apply the Language setting.
	English	 Language is an independent setting. Users' own
	Français	language setting will override the factory default. When users set Reset to Yes, Language will not be
	Deutsch	changed.
	Italiano	
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	
Transparency	0~5	• Users can adjust Transparency in any mode.

1st Level Menu	2nd Level Menu	Description		
OSD Time Out	5~30s	• Users can adjust OSD Time Out in any mode.		
Power Button	OFF	• When set to OFF, users can press the power button to turn off the monitor.		
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.		
Info. On Screen	OFF	• The information of the monitor status will be shown		
	ON	on the right side of the screen.		
DP OverClocking	OFF	To overclock the monitor refresh rate, users have to set DP OverClocking to ON.		
	ON	Activating DP OverClocking will affect:		
		Affected Function Function Status		
		» PIP/PBP Set to OFF		
HDMI™ CEC	OFF	HDMI [™] CEC (Consumer Electronics Control)		
	ON	supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable.		
		 If HDMI[™] CEC is set to ON: 		
		 The monitor will automatically power on when the CEC device is turned on. 		
		 The CEC device will enter power saving mode when the monitor is turned off. 		
		 When Sony PlayStation[®], Nintendo[®] Switch[™], or Xbox Series XIS console is connected, Game Mode and Pro Mode will be automatically set to default Eco mode and can be adjusted to users' preferred modes later. 		
Reset	YES	Users can Reset and restore settings to original OSD Default is exceeded.		
	NO	OSD Default in any mode.		

Specifications

Monitor	MAG 27C6X		
Size	27 inch		
Curvature	1500R		
Panel Type	VA		
Resolution	1920x1080 (FHD)		
Aspect Ratio	16:9		
SDR Brightness (nits)	250		
Contrast Ratio	3000:1		
Refresh Rate	250Hz		
Response Time	• 1ms (MPRT)		
	• 4ms (GTG)		
I/O	• HDMI™ Connector x 2		
	• DisplayPort x1		
	• Headphone Jack x1		
View Angles	178°(H) , 178°(V)		
DCI-P3*/ sRGB	77%/ 90%		
Surface Treatment	Anti-glare		
Display Colors	1.07B (8bits + FRC)		
Monitor Power Options	100~240Vac, 50/60Hz, 1.5A		
Power Consumption	Power On < 21W		
(Typical)	Standby < 0.5W		
	Power Off < 0.3W		
Adjustment (Tilt)	-5° ~ 20°		
Kensington Lock	Yes		
VESA Mounting	• Plate Type: 100 x 100 mm		
	• Screw Type: M4 x 10 mm		
	• Thread Diameter: 4 mm		
	 Thread Pitch: 0.7 mm 		
	 Thread Length: 10 mm 		

Monitor		MAG 27C6X	
Dimension (W x D x H)		610.5 x 249.8 x 451.6 mm	
Weight Gross		3.95 kg	
		6.51 kg	
Environment Operating		• Temperature: 0°C to 40°C	
		 Humidity: 20% to 90%, non-condensing 	
		• Altitude: 0 ~ 5000m	
Storage • Temperature: -20°C to 60°C		• Temperature: -20°C to 60°C	
		• Humidity: 10% to 90%, non-condensing	

* Based on CIE1976 test standards.

Preset Display Modes

Important

All information is subject to change without prior notice.

e	Resolution		Standard D	Standard Default Mode	
Standard			HDMI™	DP	
VGA	640x480	@60Hz	V	V	
		@67Hz	V	V	
		@72Hz	V	V	
		@75Hz	V	V	
SVGA	800x600	@56Hz	V	V	
		@60Hz	V	V	
		@72Hz	V	V	
		@75Hz	V	V	
XGA	1024x768	@60Hz	V	V	
		@70Hz	V	V	
		@75Hz	V	V	
SXGA	1280x1024	@60Hz	V	V	
		@75Hz	V	V	
WXGA+	1440x900	@60Hz	V	V	
WSXGA+	1680x1050	@60Hz	V	V	
Full HD	1920x1080	@60Hz	V	V	
		@85Hz	V	V	
		@165Hz	V	V	
		@240Hz	V	V	
		@250Hz		V*	

Standard	Resolution		Standard Defa	ult Mode
Stanuaru			HDMI™	DP
Video Timing	480P		V	V
Resolution	576P		V	V
	720P 1080P @50Hz		V	V
			V	V
		@60Hz	V	V
		@120Hz	V	V
	HDMI [™] VRR Function**		V	

* Users have to set DP OverClocking to ON. This is the highest refresh rate supported by DP OverClocking. If any monitor error occurs during overclocking, please downscale the refresh rate.

** HDMI™ VRR (Variable Refresh Rate) synchronizes with Adaptive-Sync (ON/ OFF).

e		Resolution		PIP Mode (Not Support HDR)	
Standard	Resolution			DP	
VGA	640x480	@60Hz	V	V	
		@67Hz	V	V	
		ି (d72Hz	V	V	
		ି ca the case of	V	V	
SVGA	800x600	@56Hz	V	V	
		@60Hz	V	V	
		@72Hz	V	V	
		៧75Hz	V	V	
XGA	1024x768	ା ପି60Hz	V	V	
		@70Hz	V	V	
		Cd75Hz	V	V	
Full HD	1920x1080	ା ପେଡି ପ୍ରତି ପ୍ରତି ପ୍ରତି ସେଥି । ସେଥି ସେଥି ସେଥି । ସେଥି ସେଥି । ସେଥି ସେଥି । ସେଥି । ସେଥି । ସେଥି । ସେଥି । ସେଥି । ସେ	V	V	
Video Timing	480P	480P		V	
Resolution	576P	576P		V	
	720P	720P		V	
	1080P	@60Hz	V	V	

6	Resolution		PBP Mode (PBP Mode (Not Support HDR)	
Standard			HDMI™	DP	
VGA	640x480	@60Hz	V	V	
		@67Hz	V	V	
		(072Hz	V	V	
		៧75Hz	V	V	
SVGA	800x600	ପ56Hz	V	V	
		ାର ଅନ୍ୟ ଅନ୍ୟ ଅନ୍ୟ ଅନ୍ୟ ଅନ୍ୟ ଅନ୍ୟ ଅନ୍ୟ ଅନ୍ୟ	V	V	
		(072Hz	V	V	
		@75Hz	V	V	
XGA	1024x768	ര60Hz	V	V	
		៧70Hz	V	V	
		៧75Hz	V	V	
Video Timing	480P		V	V	
Resolution	576P		V	V	
	720P		V	V	
PBP Full Screen Timing	960x1080	@60Hz	V	V	

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



Low Blue Light (Software Solution) Flicker Free

www.tuv.com

- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/(5/EU)).

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy



F

and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}° 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice



Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.





The terms HDMITM, HDMITM High-Definition Multimedia Interface, HDMITM Trade dress and the HDMITM Logos are trademarks or registered trademarks of HDMITM Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.